Part # & Description	Cost ea.	Order Qty.	Total
DSF040 Debris filter 	$7.85		
LID020 Lid 	$6.85		
TUB020 Center post	$3.85		
POT020 Pot	$5.58		
	Sub Total		
← ADD P&H →			
Minnesota residence add 6 1/2% tax			
	ORDER TOTAL		

Orders of
.01¢ - $19.85
Add $7.80 P&H

$19.86- $39.70
Add $14.00 P&H

$39.71 - $59.55
Add $21.00 P&H

$59.56 - $79.40
Add $28.00 P&H

$79.41 - $150.00
Add $35.00 P&H

Visa or Master Card #

Exp Date

Name

Address

City, State, Zip

Waterproof.com LLC
1253 Hallmark Ct.
Oakdale, Minnesota 55128
Ph 651 644-2000 Fax 888 362-2288

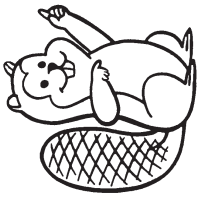

Replacement parts can be ordered factory direct.

How to install your new UnderGround DownSpout.

1. Select an area for the Bubbler pot at least eight feet from the house in line with your down spout.

2. Dig a hole eight inches deep and twelve inches in diameter for the Bubbler pot to set in.

3. Scoop out a shallow trench from the house to the Bubbler pot, sloping from four inches deep to eight inches deep at the pot.

4. Using standard 4" thin wall P.V.C. pipe and elbow. Fit one end of the pipe into the Bubbler pot the other end to the elbow.

5. Hold the Debris Filter up against the house just under your down spout and measure the length of pipe needed to connect the Debris Filter to the elbow.
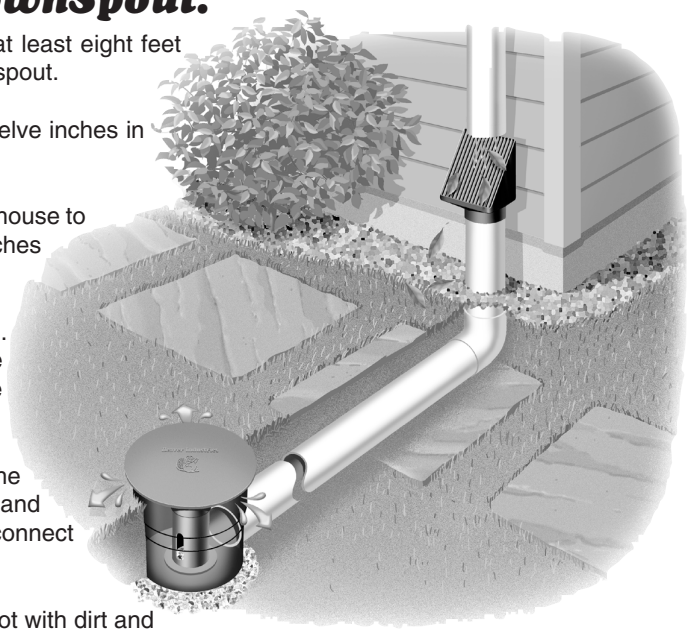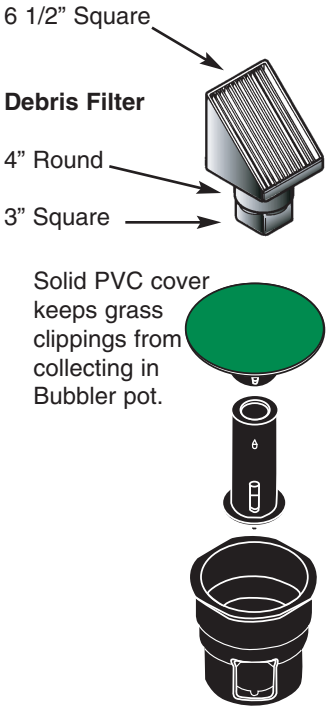
6. Back fill the trench and around the pot with dirt and tamp down. Congratulations you're done.!!!